


- All dimensions are measured in inches and [millimeters] from the top of the door to the centerline of the holes and bearings.
- Choose location(s) for CTW prep(s) from bearing slot(s) dimensioned. CTW4/5 = 1 location; CTW8/10 = 2 locations; CTW12 = 3 locations.

**For 79" HD600
Models SL11, SL24
CLEAR ONLY**

For CTW prep locations on a 79" hinge, please go to the 83" template. SELECT will use an 83" hinge and cut to 79" when a CTW is required on a 79" hinge.

38 fasteners / 31 bearings

HOLES

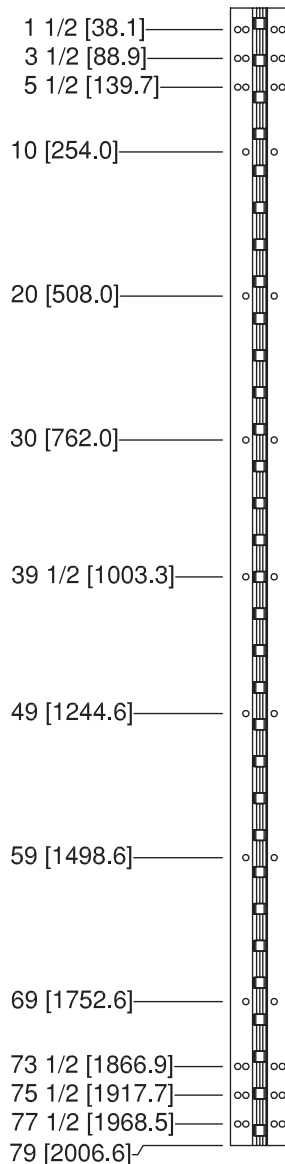


**For 83" HD300
Models SL11, SL14, SL18, SL24**

38 fasteners / 16 bearings

HOLES

CTW LOCATIONS

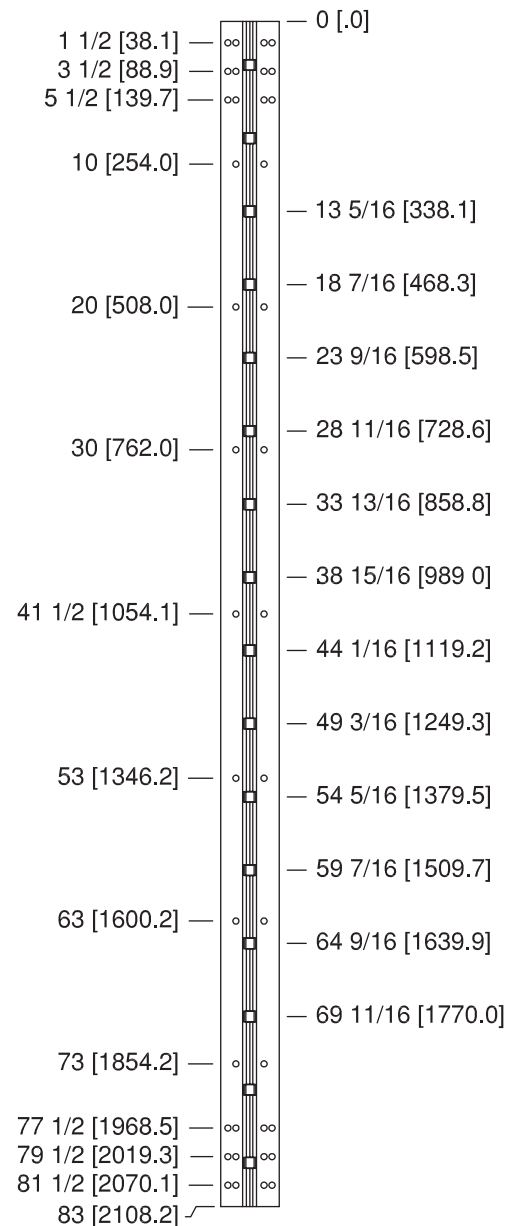

- All dimensions are measured in inches and [millimeters] from the top of the door to the centerline of the holes and bearings.
- Choose location(s) for CTW prep(s) from bearing slot(s) dimensioned. CTW4/5 = 1 location; CTW8/10 = 2 locations; CTW12 = 3 locations.

For 83" HD300 Model SL38

22 fasteners / 16 bearings

HOLES




For 83" HD600 Models SL11, SL14, SL18, SL24, SL31, SL44, SL48, SL84

38 fasteners / 32 bearings

HOLES


CTW LOCATIONS

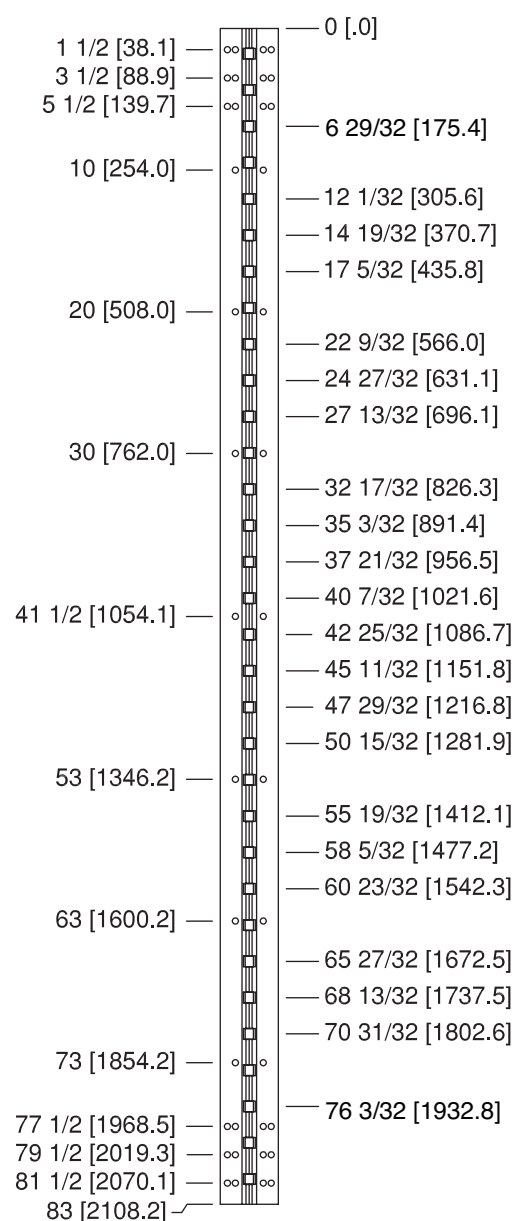

- All dimensions are measured in inches and [millimeters] from the top of the door to the centerline of the holes and bearings.
- Choose location(s) for CTW prep(s) from bearing slot(s) dimensioned. CTW4/5 = 1 location; CTW8/10 = 2 locations; CTW12 = 3 locations.


**For 83" HD600
Model SL12**

50 fasteners / 32 bearings

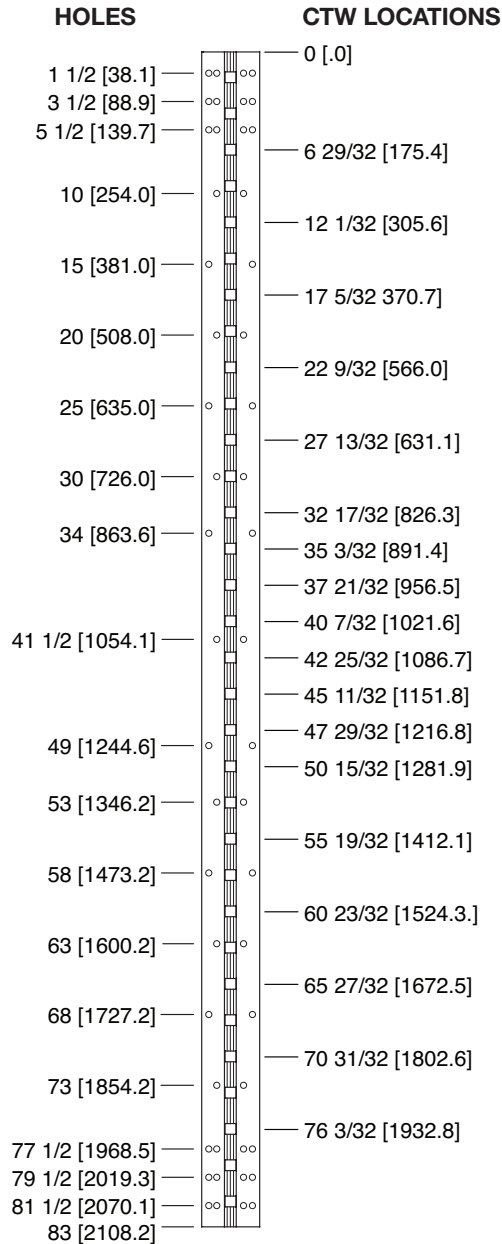

**For 83" HD600 Safety Hinge
Model SL71**


38 fasteners / 32 bearings

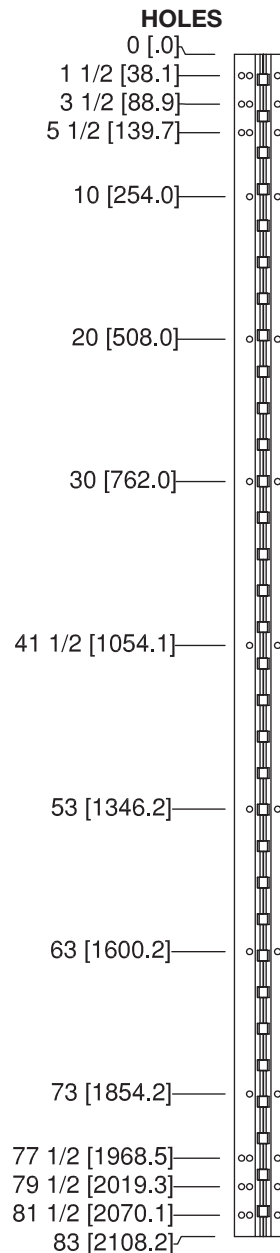

- All dimensions are measured in inches and [millimeters] from the top of the door to the centerline of the holes and bearings.
- Choose location(s) for CTW prep(s) from bearing slot(s) dimensioned. CTW4/5 = 1 location; CTW8/10 = 2 locations; CTW12 = 3 locations.


**For 83" LL
Models SL11, SL18, SL24, SL84**

52 fasteners / 32 bearings

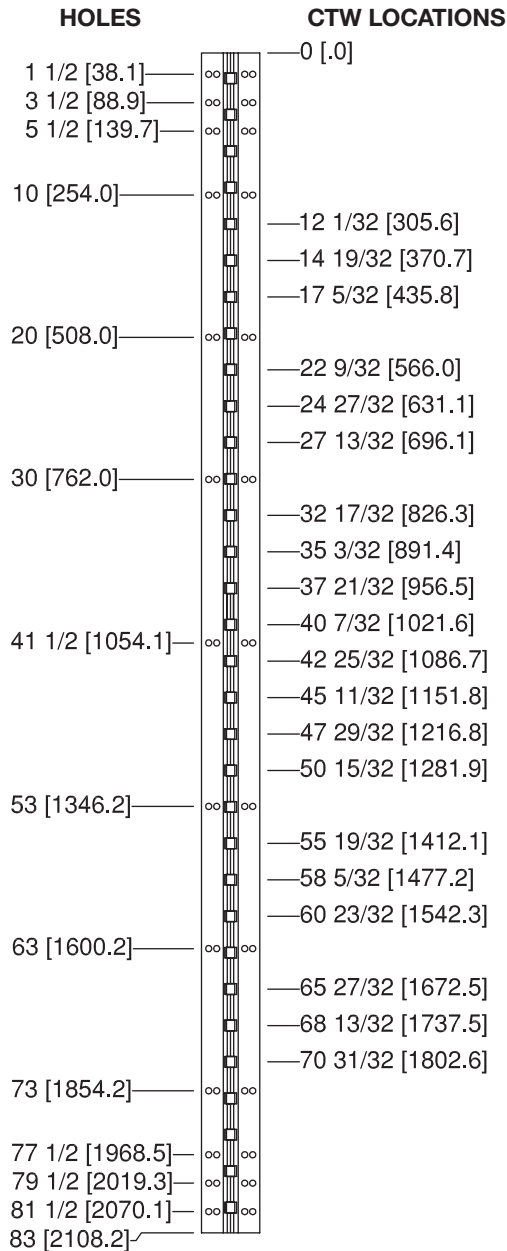

**For 83" LL
Models SL26, SL27**


50 fasteners / 32 bearings

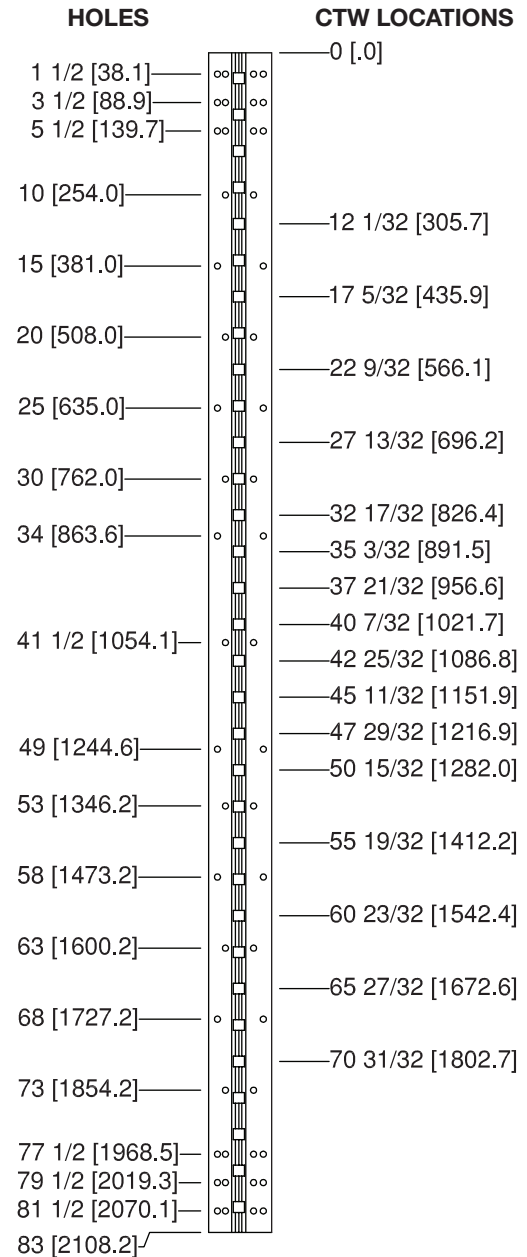

- All dimensions are measured in inches and [millimeters] from the top of the door to the centerline of the holes and bearings.
- Choose location(s) for CTW prep(s) from bearing slot(s) dimensioned. CTW4/5 = 1 location; CTW8/10 = 2 locations; CTW12 = 3 locations.


**For 85" HD300
Models SL11, SL14, SL18, SL24**

38 fasteners / 16 bearings

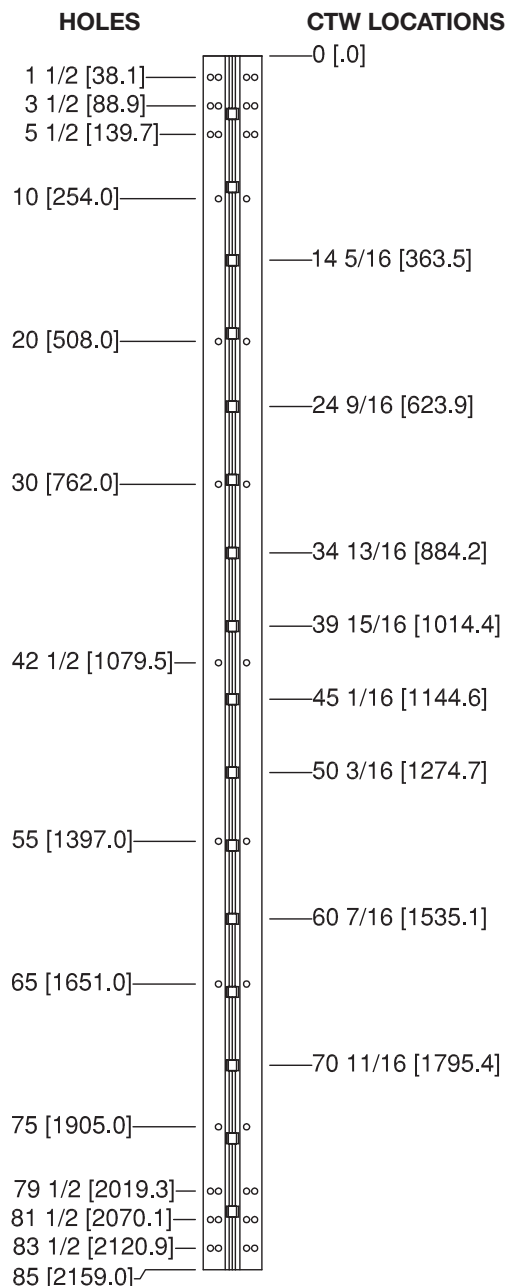

**For 85" HD600
Models SL11, SL14, SL18, SL24, SL84**


38 fasteners / 32 bearings

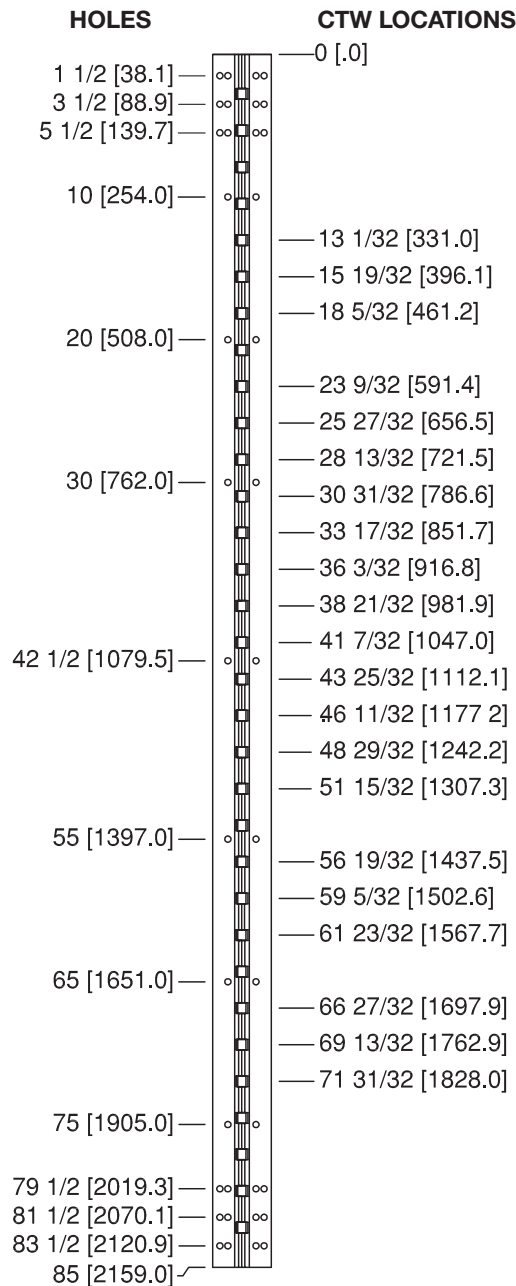

- All dimensions are measured in inches and [millimeters] from the top of the door to the centerline of the holes and bearings.
- Choose location(s) for CTW prep(s) from bearing slot(s) dimensioned. CTW4/5 = 1 location; CTW8/10 = 2 locations; CTW12 = 3 locations.


**For 85" LL
Models SL11, SL18, SL24, SL84**

52 fasteners / 32 bearings

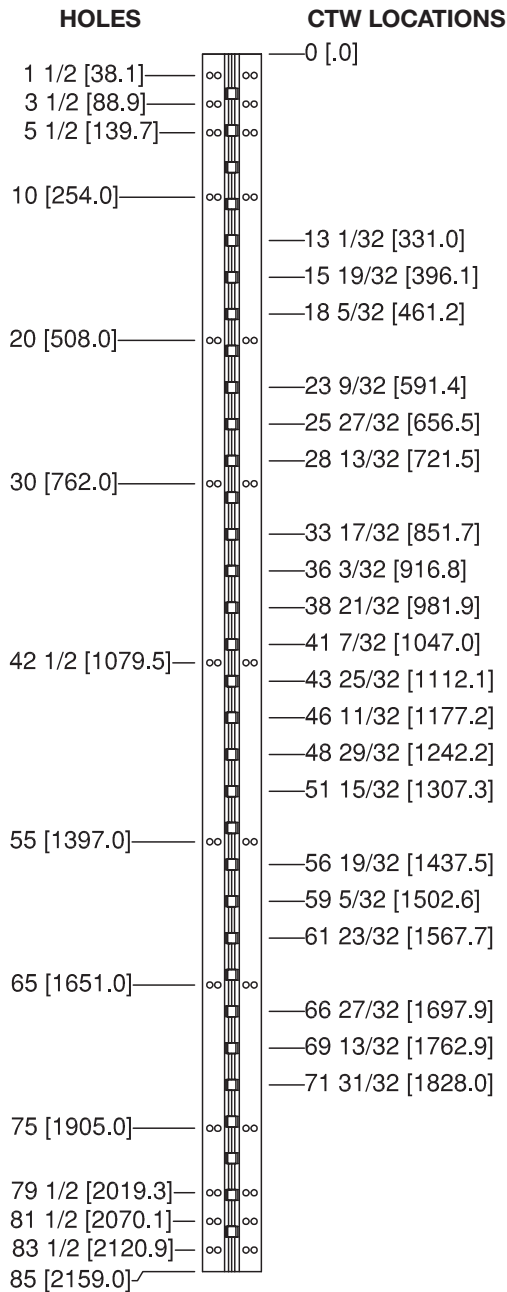

**For 85" LL
Models SL26, SL27**


50 fasteners / 32 bearings

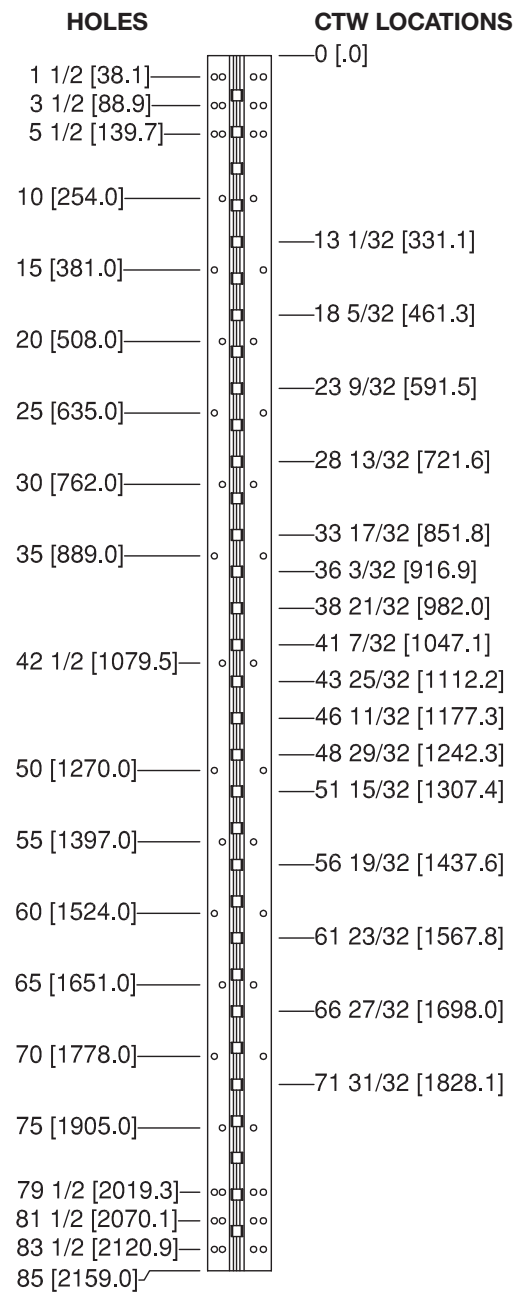

- All dimensions are measured in inches and [millimeters] from the top of the door to the centerline of the holes and bearings.
- Choose location(s) for CTW prep(s) from bearing slot(s) dimensioned. CTW4/5 = 1 location; CTW8/10 = 2 locations; CTW12 = 3 locations.


**For 95" HD300
Models SL11, SL14, SL18, SL24**

42 fasteners / 18 bearings

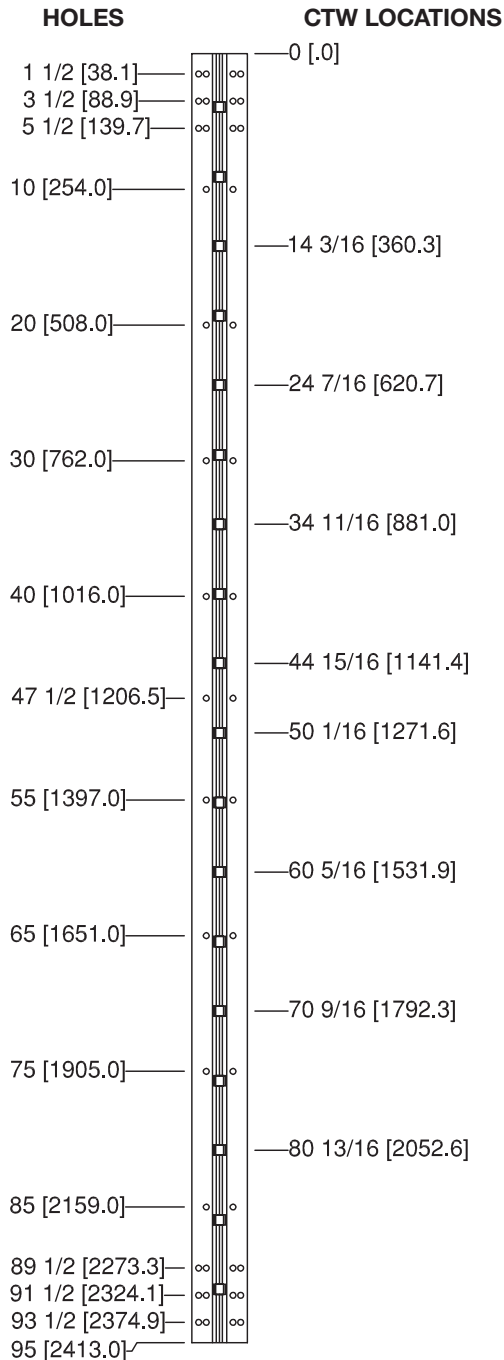

**For 95" HD300
Model SL38**


22 fasteners / 18 bearings

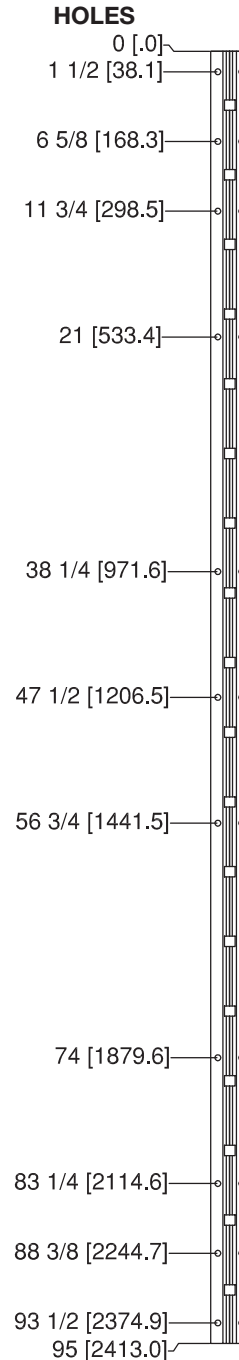

- All dimensions are measured in inches and [millimeters] from the top of the door to the centerline of the holes and bearings.
- Choose location(s) for CTW prep(s) from bearing slot(s) dimensioned. CTW4/5 = 1 location; CTW8/10 = 2 locations; CTW12 = 3 locations.


**For 95" HD600
Models SL11, SL14, SL18, SL24, SL31,
SL44, SL48, SL84**

42 fasteners / 36 bearings

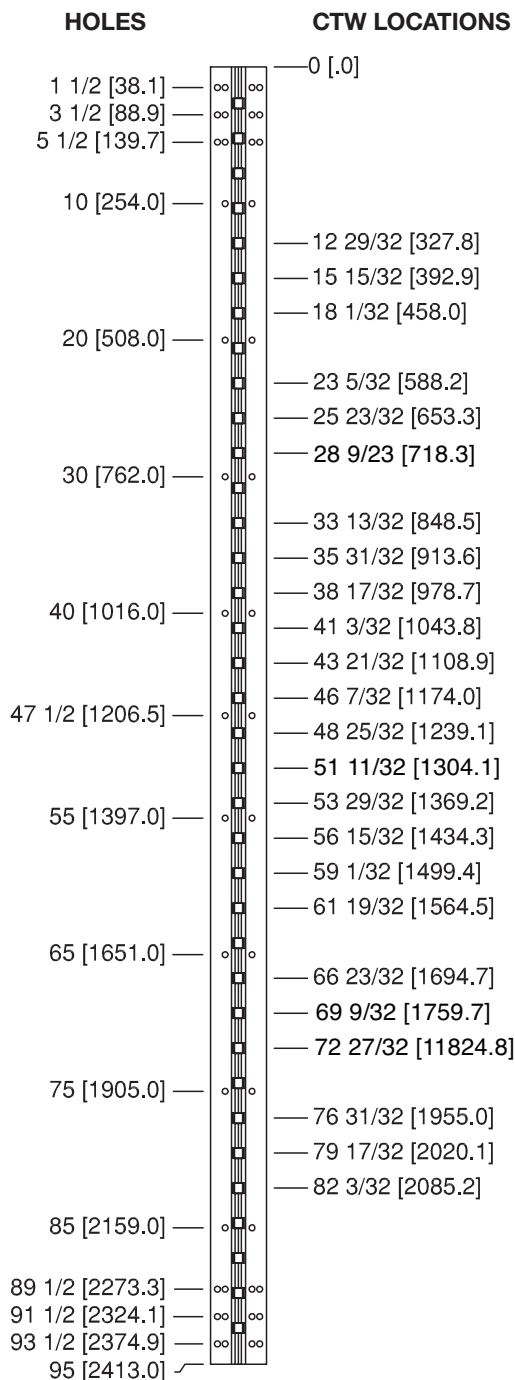

**For 95" HD600
Model SL12**

58 fasteners / 36 bearings

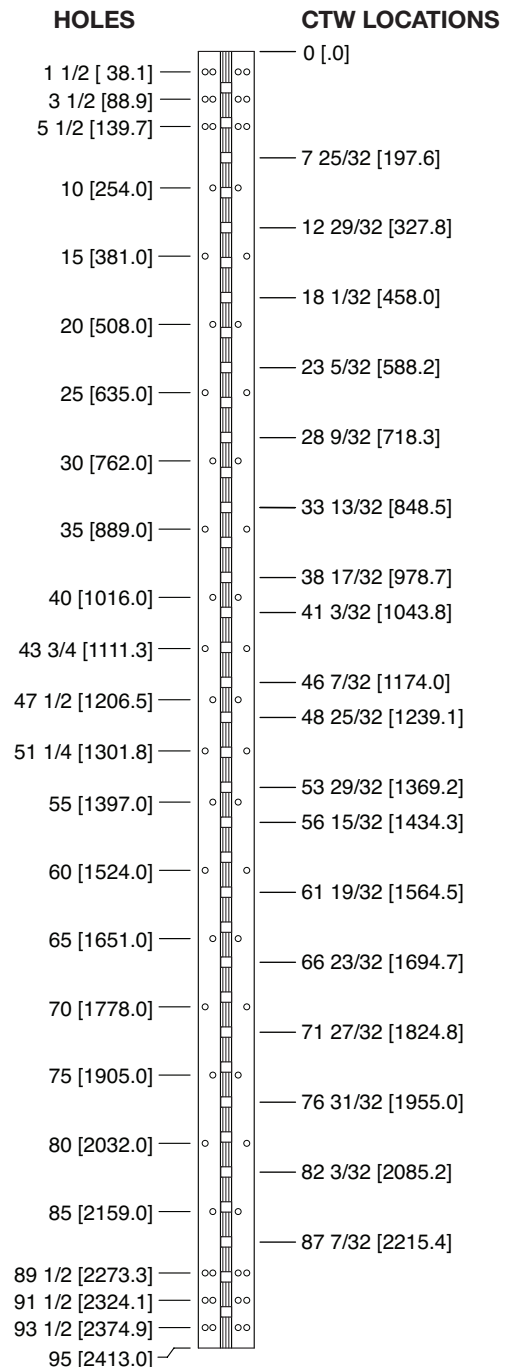


- All dimensions are measured in inches and [millimeters] from the top of the door to the centerline of the holes and bearings.
- Choose location(s) for CTW prep(s) from bearing slot(s) dimensioned. CTW4/5 = 1 location; CTW8/10 = 2 locations; CTW12 = 3 locations.

**For 95" HD600 Safety Hinge
Model SL71**

42 fasteners / 36 bearings

HOLES

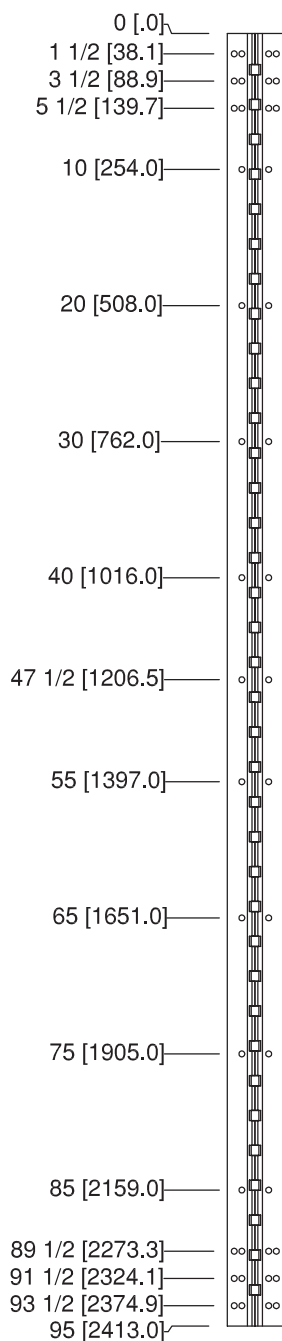


**For 95" LL
Models SL11, SL18, SL24, SL84**

60 fasteners / 36 bearings

HOLES


CTW LOCATIONS

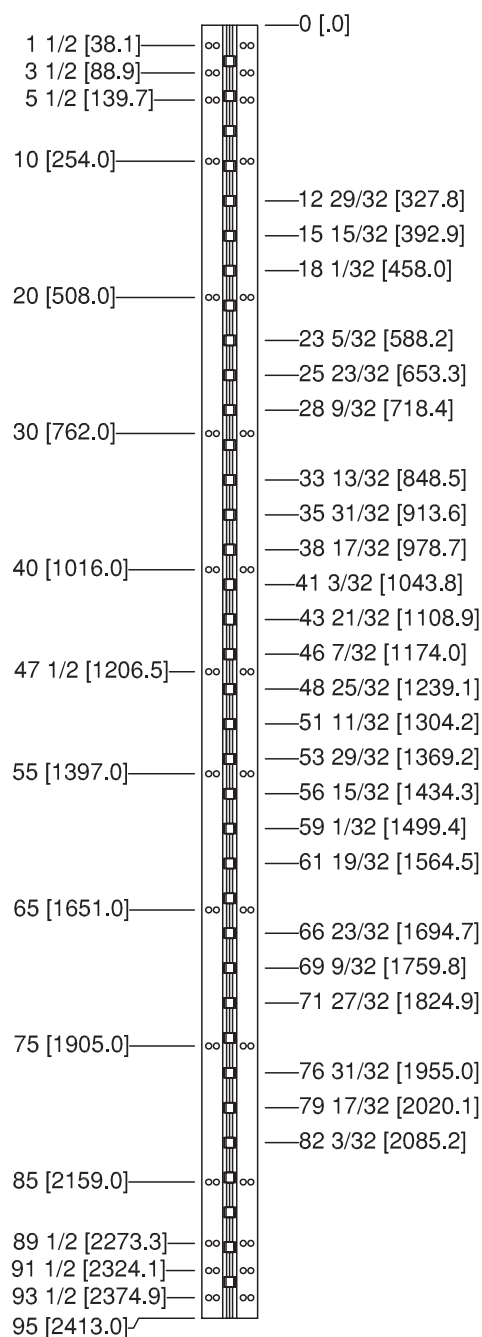

- All dimensions are measured in inches and [millimeters] from the top of the door to the centerline of the holes and bearings.
- Choose location(s) for CTW prep(s) from bearing slot(s) dimensioned. CTW4/5 = 1 location; CTW8/10 = 2 locations; CTW12 = 3 locations.


For 95" LL Models SL26, SL27

58 fasteners / 36 bearings

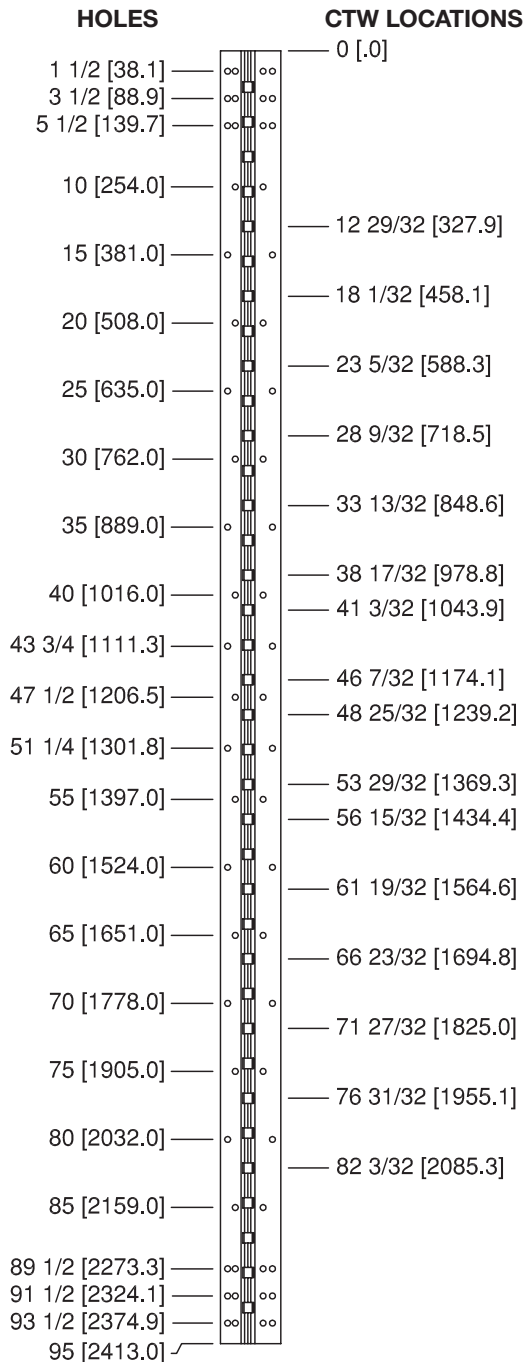

For 120" HD600 Models SL11, SL14, SL18, SL24, SL31, SL84


46 fasteners / 47 bearings

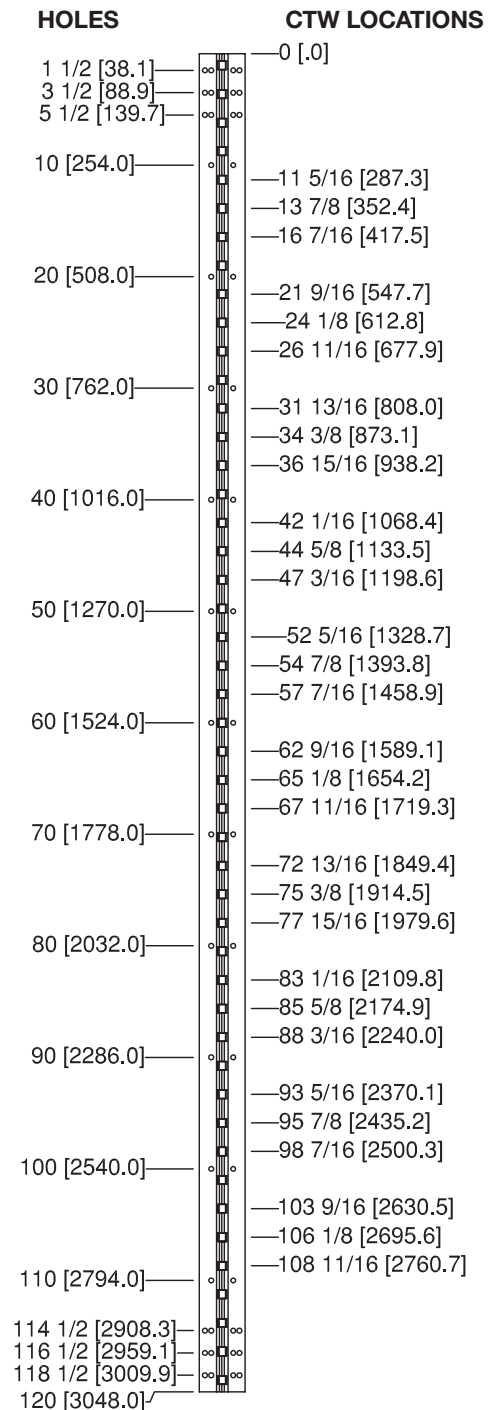

- All dimensions are measured in inches and [millimeters] from the top of the door to the centerline of the holes and bearings.
- Choose location(s) for CTW prep(s) from bearing slot(s) dimensioned. CTW4/5 = 1 location; CTW8/10 = 2 locations; CTW12 = 3 locations.


**For 120" HD600
Model SL12**

66 fasteners / 47 bearings

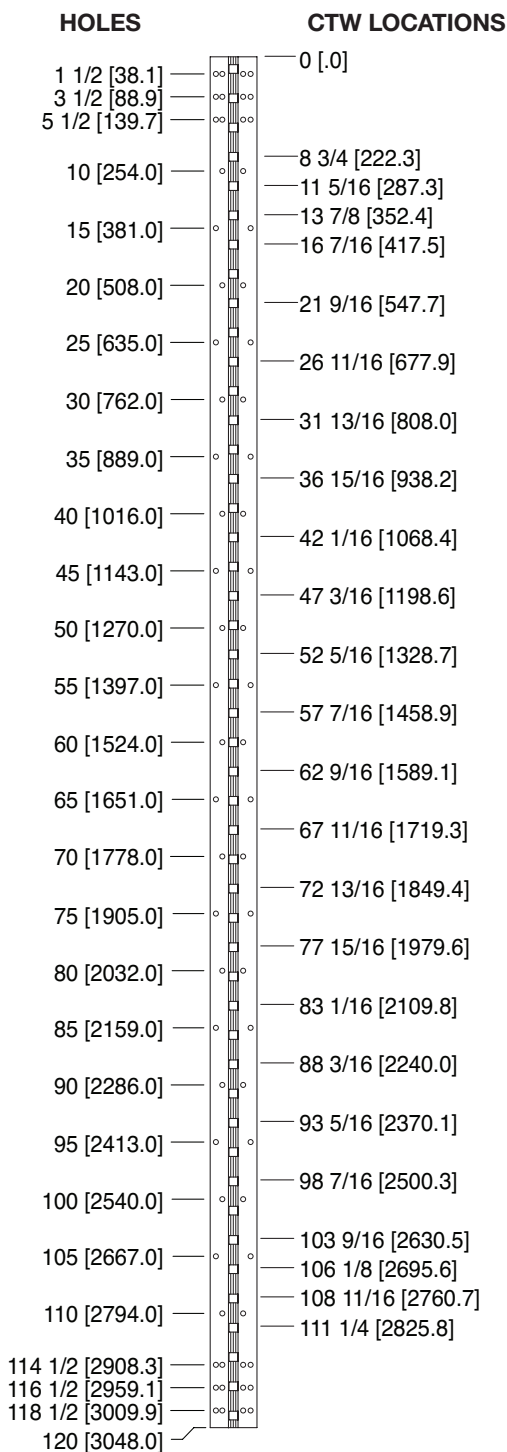

**For 120" LL
Models SL11, SL18, SL24, SL84**

68 fasteners / 47 bearings

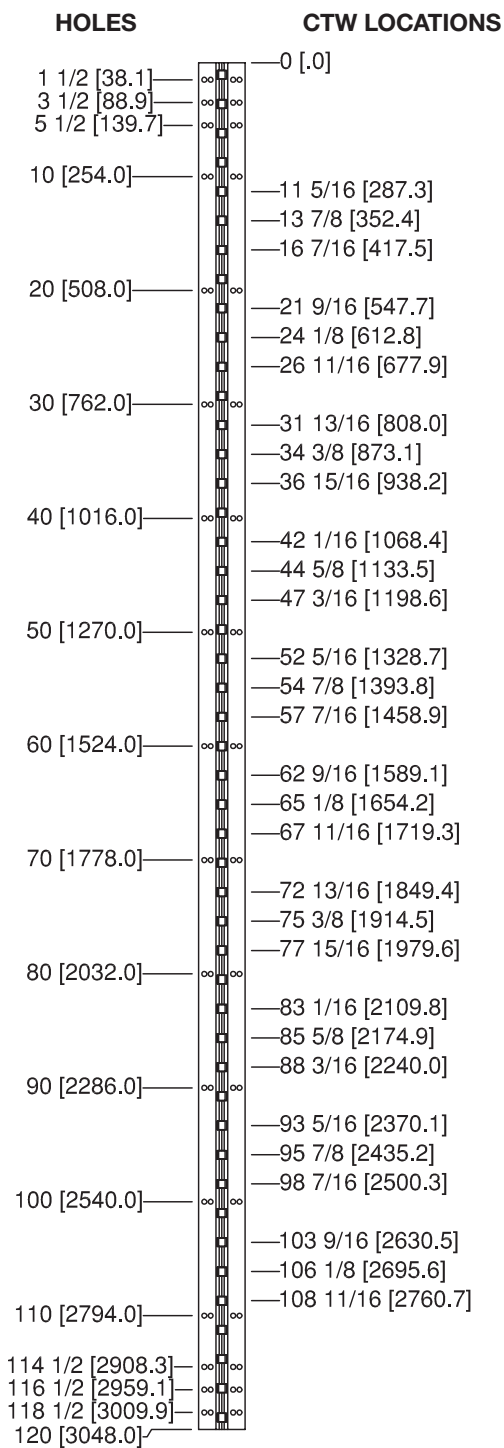

- All dimensions are measured in inches and [millimeters] from the top of the door to the centerline of the holes and bearings.
- Choose location(s) for CTW prep(s) from bearing slot(s) dimensioned. CTW4/5 = 1 location; CTW8/10 = 2 locations; CTW12 = 3 locations.

